


Critical locations for safety glass

Some frequently encountered critical locations are shown and described below.
The recommendations given are based on reasonable standards of behaviour by the building user.

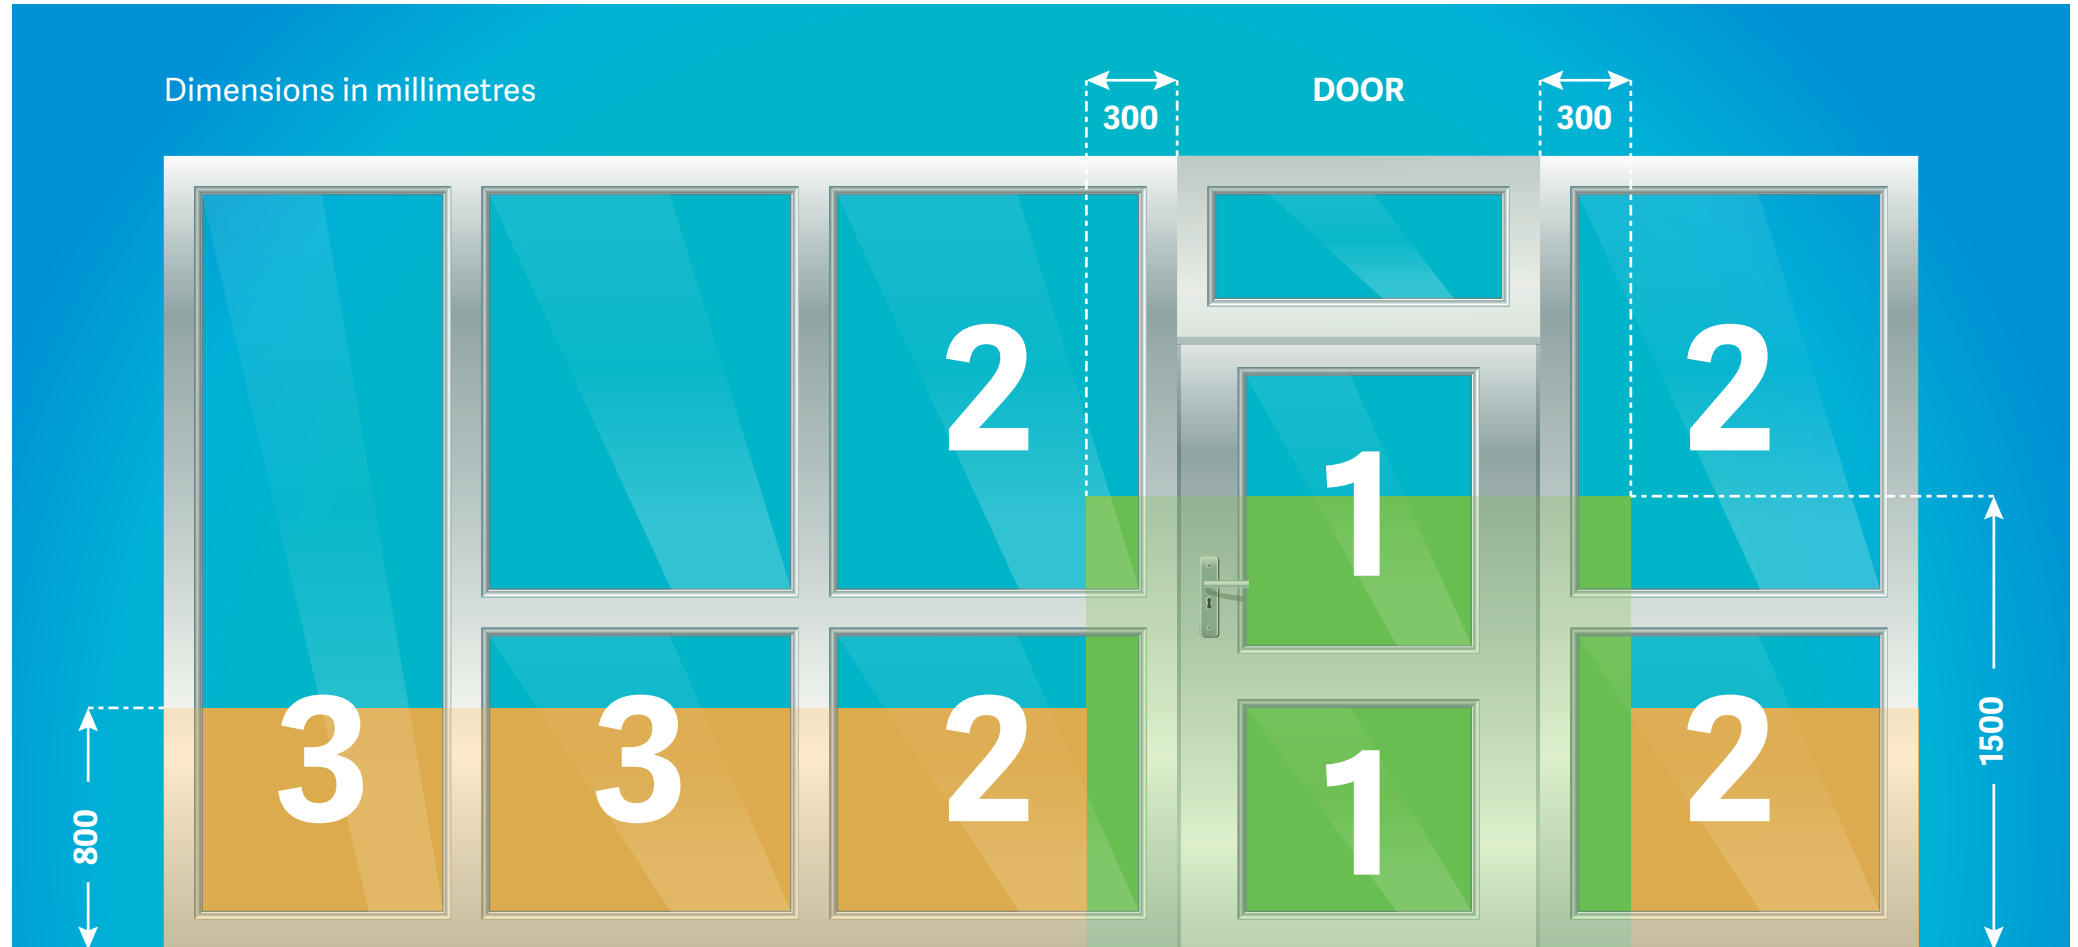

1 **Doors** (glazing wholly, or partly, within 1500mm from floor or ground level)

2 **Door side panels** (glazing wholly, or partly, within 300mm from the edge of a door and wholly, or partly, within 1500mm from floor or ground level)

3 **Low level glazed areas** (glazing wholly, or partly, within 800mm from floor or ground level [excluding that dealt with in door & door side panels])

In critical areas, as described above considerations should be taken to ensure the correct use of safety glass.

For further information regarding glass type & safety classification please refer to BS 6262 part 4:1994.